

WS10MS04A User Guide

:: Each Device's Sub-Panel ::

1, This program is specially made to demonstrate the built-in Flash mode 1~9 in each device's control box. Therefore, its panel design is quite different from other software.


2, There are only 3 buttons and 3 message boxes (color of red, green and purple) in each device's sub-panel. And there are 9 pattern selection buttons (at most only one is on) for each device.

3, The 3 buttons are "Link", "Unlink" and "Stop". The 3 message boxes refresh data periodically when the device runs.


4, Select one of the 9 patterns to run the built-in Flash mode 1~9.

5, For Fan and Pump devices, it is better to change patterns when the speed is low.

6, There is a speed trackbar below. It is used to adjust the running speed of the pattern. Adjust the trackbar first and press the selection button to change to a different speed.

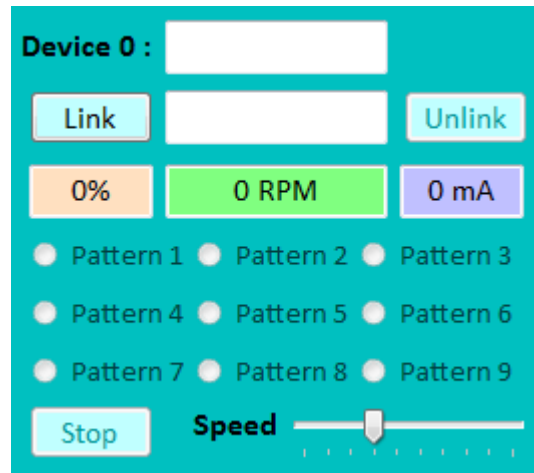

:: Central Control Buttons ::

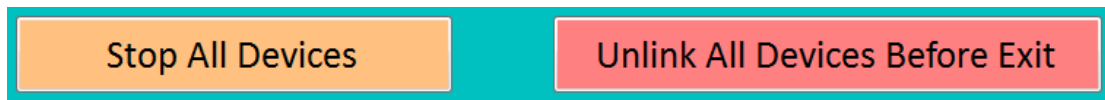

1, There are 2 central control buttons in the lower part of the user panel.

2, "Stop All Devices" button to stop all the devices at the same time.

3, "Unlink All Devices Before Exit" button to unlink all devices.

4, If a device is linked but user does not take any action (click any button) for over 3 minutes, the device will be automatically unlinked. It doesn't matter, just click "Link" button again to get connection. This is to prevent that in some cases the unstable WiFi will break a device's connection.